



Machine	Explode	Code	Description	Available for special order
CC771	1	N/A	Power Loom	✓
CC771	2	N/A	Bar	✓
CC771	3	N/A	Rubber Mousse	✓
CC771	4	N/A	Lever SX	✓
CC771	5	N/A	Taper Key SX	✓
CC771	6	N/A	Taper Key DS	✓
CC771	7	N/A	Lever DS	✓
CC771	8	N/A	Liquid Tank	✓
CC771	9	N/A	Right Cover	✓
CC771	10	N/A	Left Cover	✓
CC771	11	N/A	Screw	✓
CC771	12	N/A	Cap Spring	✓
CC771	13	N/A	Power Loom Rubber	✓
CC771	14	N/A	Pump	✓
CC771	15	N/A	Voltage Trasformer	✓
CC771	16	N/A	Bar Rubber	✓
CC771	17	N/A	Cap Tank DS	✓
CC771	18	N/A	Spacer Rubber Bar	✓
CC771	19	N/A	Foot Rubber	✓
CC771	20	N/A	Electronic Power Board	✓
CC771	23	N/A	Bracket	✓
CC771	27	N/A	Cap Tank SX	✓
CC771	28	N/A	Teflon	✓
CC771	29	N/A	Stainless Steel Ball	✓
CC771	30	N/A	Electronic Display Board	✓
CC771	31	N/A	Pipe	✓
CC771	32	N/A	Resistance	✓
CC771	33	N/A	Washer	✓
CC771	34	N/A	Screw	✓
CC771	35	N/A	Screw	✓
CC771	36	N/A	Washer Toothed	✓
CC771	37	N/A	Screw	✓
CC771	38	N/A	Pipe	✓
CC771	39	N/A	Y Branch	✓
CC771	40	N/A	Pipe	✓
CC771	41	N/A	Nut	✓
CC771	42	N/A	Pipe	✓
CC771	43	N/A	Air Vent	✓