








## Exploded diagram and spare parts list

L515 Rev.2

Machine	Explode	Code	Description
L515 Buffalo Griddle	1		Griddle Plate
L515 Buffalo Griddle	2	N127	Heating /Element
L515 Buffalo Griddle	3	AC610	Mica Plate
L515 Buffalo Griddle	4		Insulation Clamp
L515 Buffalo Griddle	5	N126	120°C Thermal Cut out
L515 Buffalo Griddle	6	AG599	Reset Cap
L515 Buffalo Griddle	7	AG598	Reset Plate
L515 Buffalo Griddle	8	AG597	Reset Stick
L515 Buffalo Griddle	9		Plug & Lead
L515 Buffalo Griddle	10	N152	Feet
L515 Buffalo Griddle	11		Base Plate
L515 Buffalo Griddle	12	N125	300°C Thermostat
L515 Buffalo Griddle	13		Dial
L515 Buffalo Griddle	14		Indicator Light
L515 Buffalo Griddle	15	N128	Drip Tray
L515 Buffalo Griddle	16		Main Body